

LED Color On APR Module	Meaning
NO LED	Device is in bypass mode or not powered, and will not adjust pedal sensitivity
Solid Green	APR has learned your vehicles accelerator pedal and can adjust pedal sensitivity. No Mobile device is currently connected.
Solid Red	A Mobile device is connected to the APR Module
Solid Orange	A Mobile device is connected to the APR Module, has learned your vehicles accelerator pedal and can adjust sensitivity
Flickering RED	Mobile device is communicating with the APR Module
Blinking RED	If the Red LED is continuously blinking slowly, The device may not be able to read the calibration EEPROM.

Troubleshooting without a Mobile Phone connected to the APR Module

Symptom	Possible cause	Recommended Action
APR module LED is not Green	APR harnesses are not fully connected	Confirm the harnesses are securely connected to the vehicle harness, accelerator pedal and the APR module.
	A pedal relearn has not been completed	Complete a pedal relearn. See the quick start guide for instruction
APR module LED is not Orange when a mobile device is connected	A pedal relearn has not been completed	Complete a pedal relearn.
Wireless switch is not turning on	Batteries may be installed incorrectly	Reinstall batteries. The positive side of the batteries should be visible when in the battery tray.
	Wireless switch has not been connected to the APR Module	Follow the quick start guide instructions for connecting your wireless switch.

Wireless switch is not changing the pedal sensitivity	Wireless switch has not been connected to the APR Module	Reset switch pairing with the Mobile app. Follow the quick start guide instructions for connecting your wireless switch.
	A pedal relearn has not been completed	Complete a pedal relearn. See the quick start guide for instruction
APR module LED is slowly blinking RED	Device cannot read the calibration EEPROM	Hard Reset the device by disconnecting, letting it rest for apprx. 10 seconds, and reconnecting the harnesses.

Troubleshooting with a Mobile Phone connected to the APR Module

Symptom	Possible cause	Recommended Action
APR module LED is not Red	APR harnesses are not fully connected	Confirm the harnesses are securely connected to the vehicle harness, accelerator pedal and the APR module.
	A mobile device is not linked to the APR module	Follow the in App instruction for linking a mobile device.
Mobile device will not link to the APR module	The APR device cannot be found	Confirm the harnesses are securely connected to the vehicle harness, accelerator pedal and the APR module.
	The APR device cannot be found	Follow the in App instruction for linking a mobile device.
	Bluetooth is not enabled on the mobile device	Enable Bluetooth connection for the APR mobile app.
	Location services are not enabled on the mobile device	Enable location services for the APR mobile app.
Mobile device is not change the pedal sensitivity	A pedal relearn has not been completed	Complete a pedal relearn. Follow the in app instructions from the devices page (the LED on the APR module will be orange when complete)
APR module LED is slowly blinking RED	Device cannot read the calibration EEPROM	Hard Reset the device by disconnecting, letting it rest for apprx. 10 seconds, and reconnecting the harnesses.