

#TL100178

INSTALLATION MANUAL

# CI100020-A

APR Secondary Air Filter

**APR**





---

## Notes:

These instructions were written for any car with Secondary Air Injection, typically found in the North American region.

When disassembling the car, be sure to keep all fasteners so they can be reused. It is recommend that you get some kind of compartmented tray to organize the fasteners, such as a fishing tackle box or several large ice cube trays. Fasteners that are not reused for reinstallation are noted in the instructions. All directions used in this manual (right, left, front, etc.) are based on if you were sitting in the drivers seat of the car.


These instructions assume that you have basic mechanical skills and several varieties of basic hand tools in order to install the kit. If you have any questions about the install, feel free to contact your APR representative.



WWW.GOAPR.COM

4800 US HWY 280 West Opelika Alabama 36801

**TL100178**

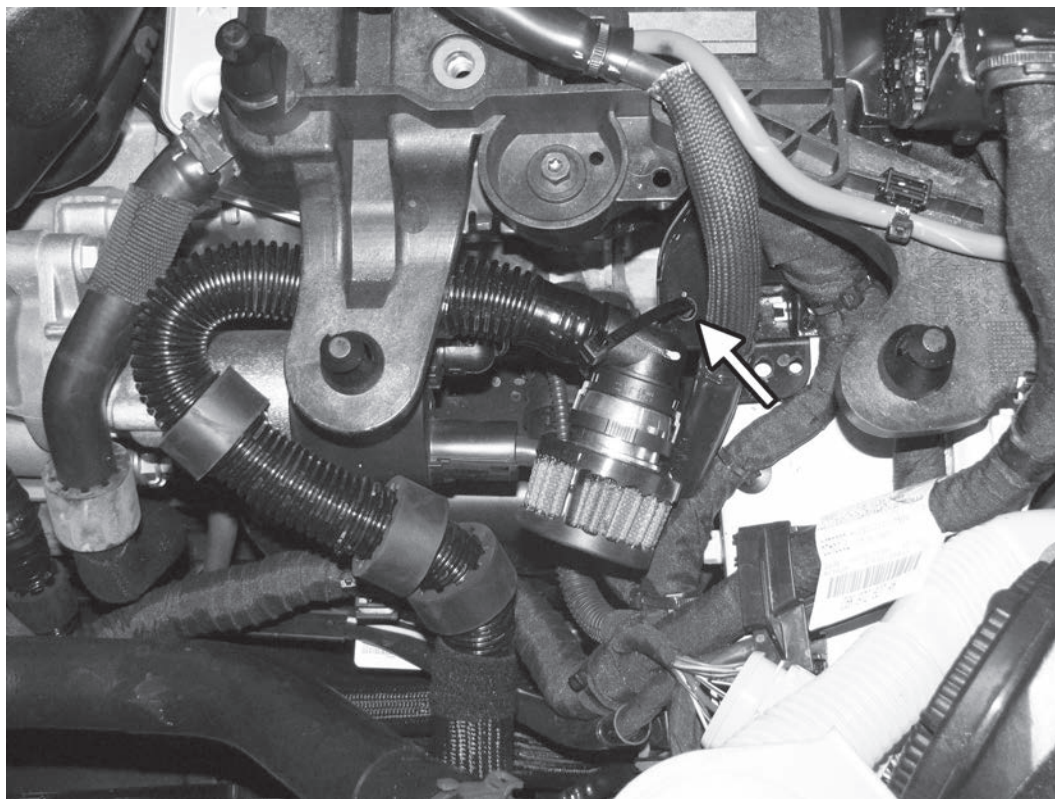

1) Clip the APR secondary air filter into the factory fitting on the end of the secondary air pipe. Bend the pipe to tuck it out of the way and secure it with the supplied cable ties.

---

***APR***

---



#TL100178

***GOAPR.COM***