




APR, LLC
4800 US HWY 280 WEST
OPELIKA, AL 36801 USA
800.680.7921
334.502.5181
GOAPR.COM

APR GLI Adapter Bracket for CI100033

TL100127


- Follow the installation instructions for CI100033 up to the point of installing the APR intake into the car.
- Hold the APR bracket to the front of the intake. Install the screw with the 4MM allen head, flat washer, and locknut as shown below. The placement of the washer, bracket, and flange on the intake are critical.

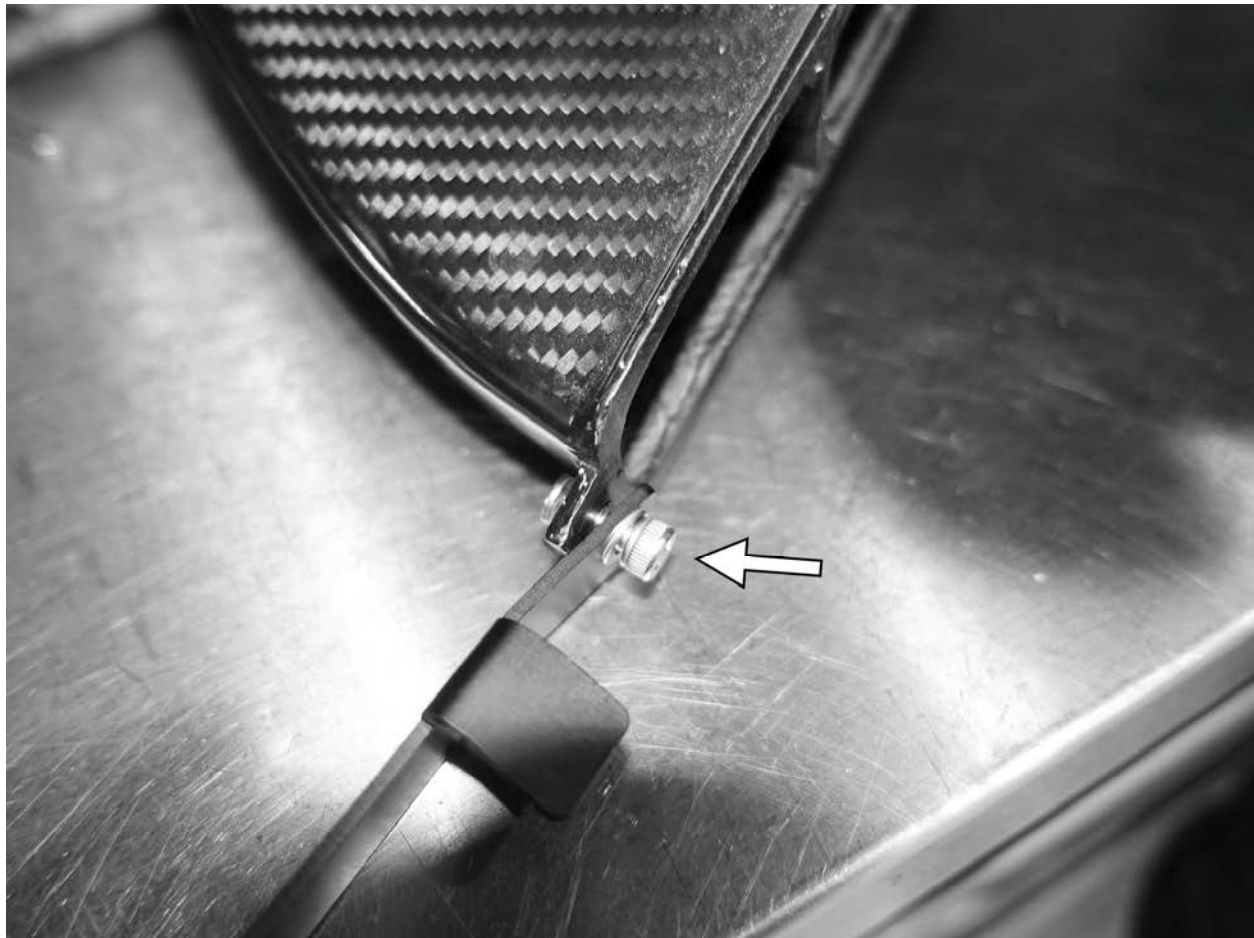

- While holding the locknut with a 8MM combination wrench, tighten the 4MM allen screw to 35 in-lbs (4Nm). Be sure you can still rotate the APR bracket on the intake.

ENHANCING
THE DRIVING
EXPERIENCE

- Loosely place the APR intake into the car. Place the intake against the back of the radiator core support, and make sure the tab on the APR bracket sits in the ribbing on the back side of the core support. Rotate the bracket if necessary to ensure the tab sits on top of this ribbing. The bracket will also line up with a threaded hole on the back side of the hood latch.

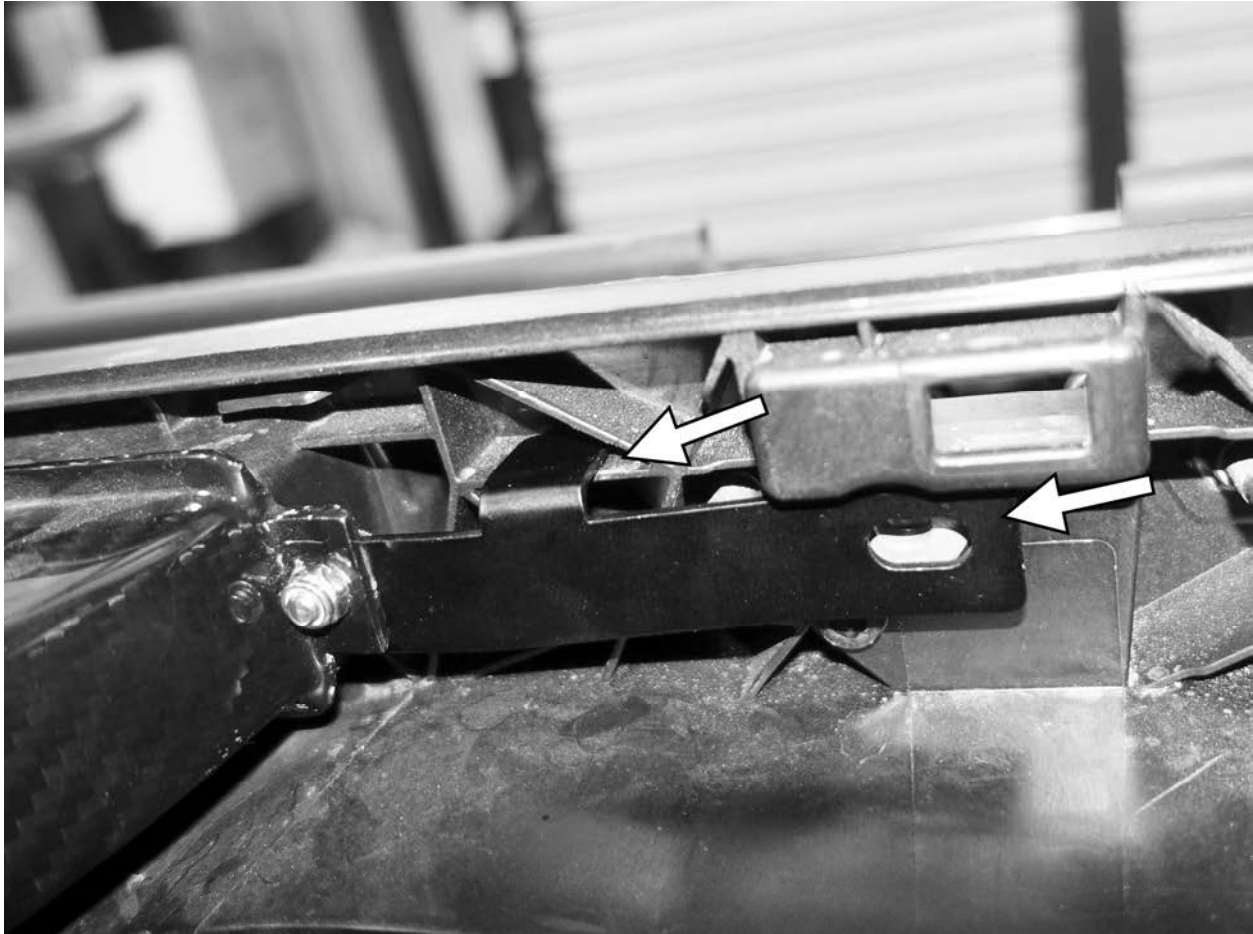

- Install the remaining 5MM allen screw with flat washer to hold the intake bracket to the radiator core support. Torque the 5MM allen to 88 in-lbs (10Nm).



- Finish the installation by following the last two steps of the CI100033 manual. The screw on the other side of the intake (left) is not installed in this application.