



How to use this template:

1. Stick this page onto a thin piece of cardboard.
2. Cut along the red dashed line. This is a 2.5mm clearance gap for the brake system to fit under the wheel.
3. Fit the "Stock Wheel Register" section into your wheel's spigot hole.
4. The dashed line must clear the wheel spokes to ensure sufficient clearance for the brake system.

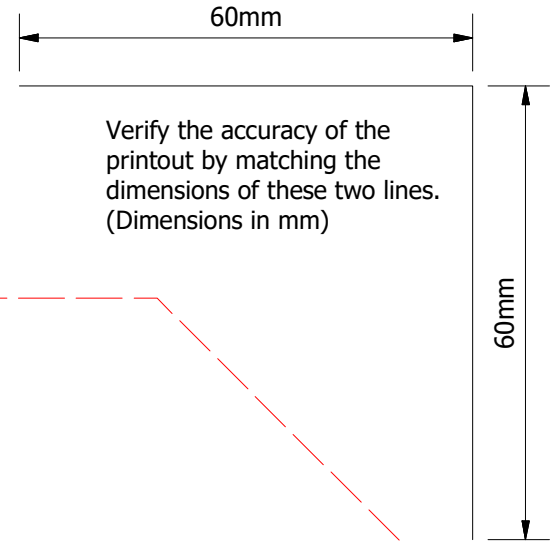

Verify the accuracy of the printout by matching the dimensions of these two lines. (Dimensions in mm)

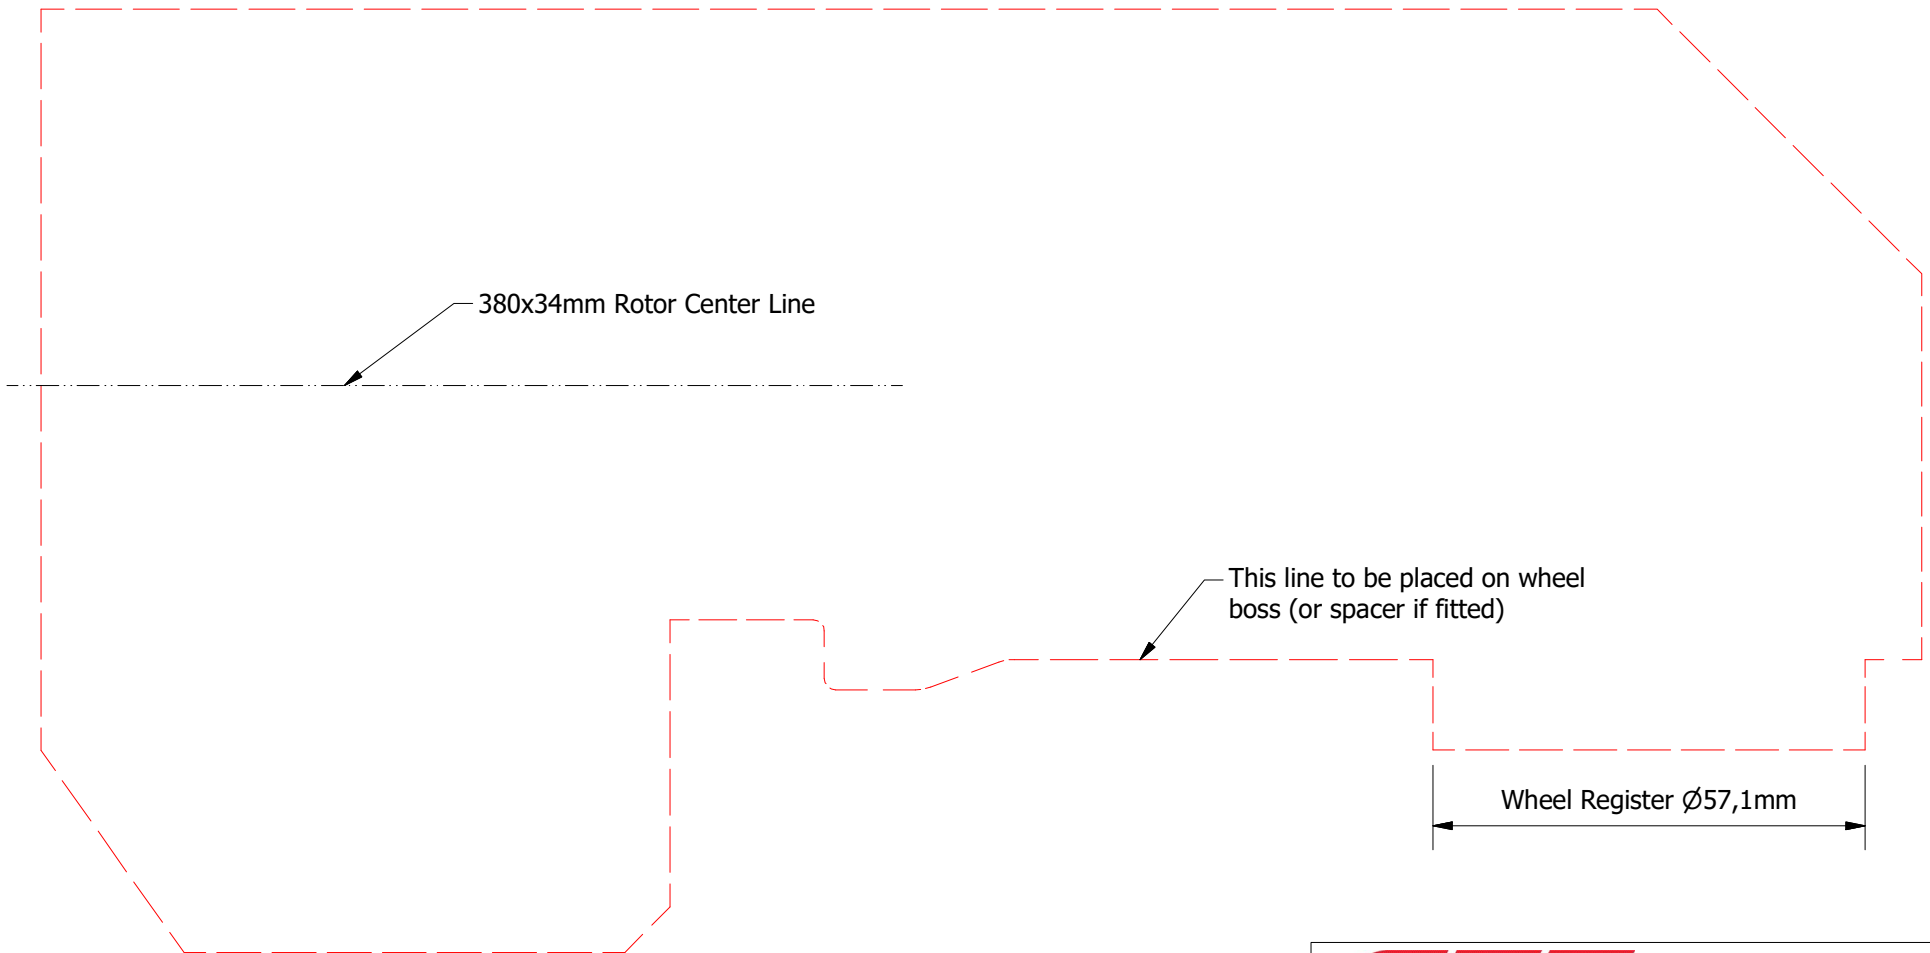

Printing Notes:

Set printer options to "Actual Size" (no scaling), and paper size must be set to A4 Landscape

<b>APR</b> <a href="http://www.goapr.com">www.goapr.com</a>	
CALIPER: 6-piston	Wheel Fitment Template
DISC: 380x34mm	VEHICLE:
DATE: 16-Jan-19	Audi RS3 Sedan (8V) Front